# OVEN PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

27" BUILT−IN ELECTRIC COMBO
HSB/CONV 27"
(GOLD LINE)




FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Literature Parts |
| | LIT8300653 | Installation Instructions |
| | LIT8300669 | Use & Care Guide (Oven) |
| | LIT8300348 | Chart, Speed Cook (Label) |
| | 3400832 | Screw |
| | LIT8300346 | Use & Care Guide (Microwave) |
| | LIT8300283 | Tech Sheet |
| | LIT3191638 | Safer Cooking Tips |
| | LIT4449237 | Cookbook |
| 2 | | Trim, Side |
| | 4455430 | RH Black |
| | 4455432 | RH White |
| | 4455431 | LH Black |
| | 4455433 | LH White |
| | 4455434 | RH Biscuit |
| | 4455435 | LH Biscuit |
| | | Screw |
| | 694091 | Black Model |
| | 4449041 | White |
| 4 | 4448520 | Bumper, Door |
| 7 | 4455285 | Top Chassis |
| | 4449809 | Screw |
| 8 | | Hinge Receiver |
| | 4455605 | Left Hand |
| | 4455606 | Right Hand |
| 9 | 4452158 | Tube, Vent |
| | 3196176 | Screw |
| 10 | 4452165 | Lens,Light |
| 11 | 4452368 | Oven Light Assy |
| 12 | 4452166 | Bulb,Light |
| 14 | 4455611 | Frame, Front |
| | 4449040 | Screw |
| 15 | 4455381 | Gasket, Door |
| 19 | 4451477 | Support, Insulation |
| | 4449809 | Screw |
| 20 | 4451605 | Cap, Spacer |
| 21 | | Rail, Side |
| | 4450583 | Right Side |
| | 4450584 | Left Side |
| | 4448444 | Grommet |
| | 4449154 | Screw |
| 25 | 4455641 | Side, Chassis (R.H. & L.H.) |
| | 4449809 | Screw |
| 26 | 4452233 | Back, Chassis |
| | 4449809 | Screw |
| 27 | | Liner, Oven (Not serviceable) |
| 29 | 4455636 | Sensor |
| | 4449154 | Screw |
| 30 | 4449845 | Bracket, Support |
| | 4449809 | Screw |
| 34 | 4451666 | Vent, Center |
| | 4450038 | Screw |
| 37 | 4451442 | Thermostat (TOD) (Temp.) SPST |
| | 4449809 | Screw |
| 43 | 4455529 | Base, Chassis |
| | 4449809 | Screw |
| 49 | 4448933 | Retainer, Gasket |
| | 4449154 | Screw |
| 50 | 4451747 | Cover, Back |
| | 4449809 | Screw |
| 51 | | Trim, Bottom |
| | 4455442 | Black Model |
| | 4455444 | White Model |
| | 4455446 | Biscuit |
| | 4450289 | Screw |
| | 4452152 | Bracket, Mounting Bottom Trim |
| 52 | 4450787 | Vent, Control |
| 53 | 4451755 | Chassis, Back |
| 54 | 4452492 | Insulation, Convection Top |
| 55 | 4452491 | Insulation, Convection, Grill |

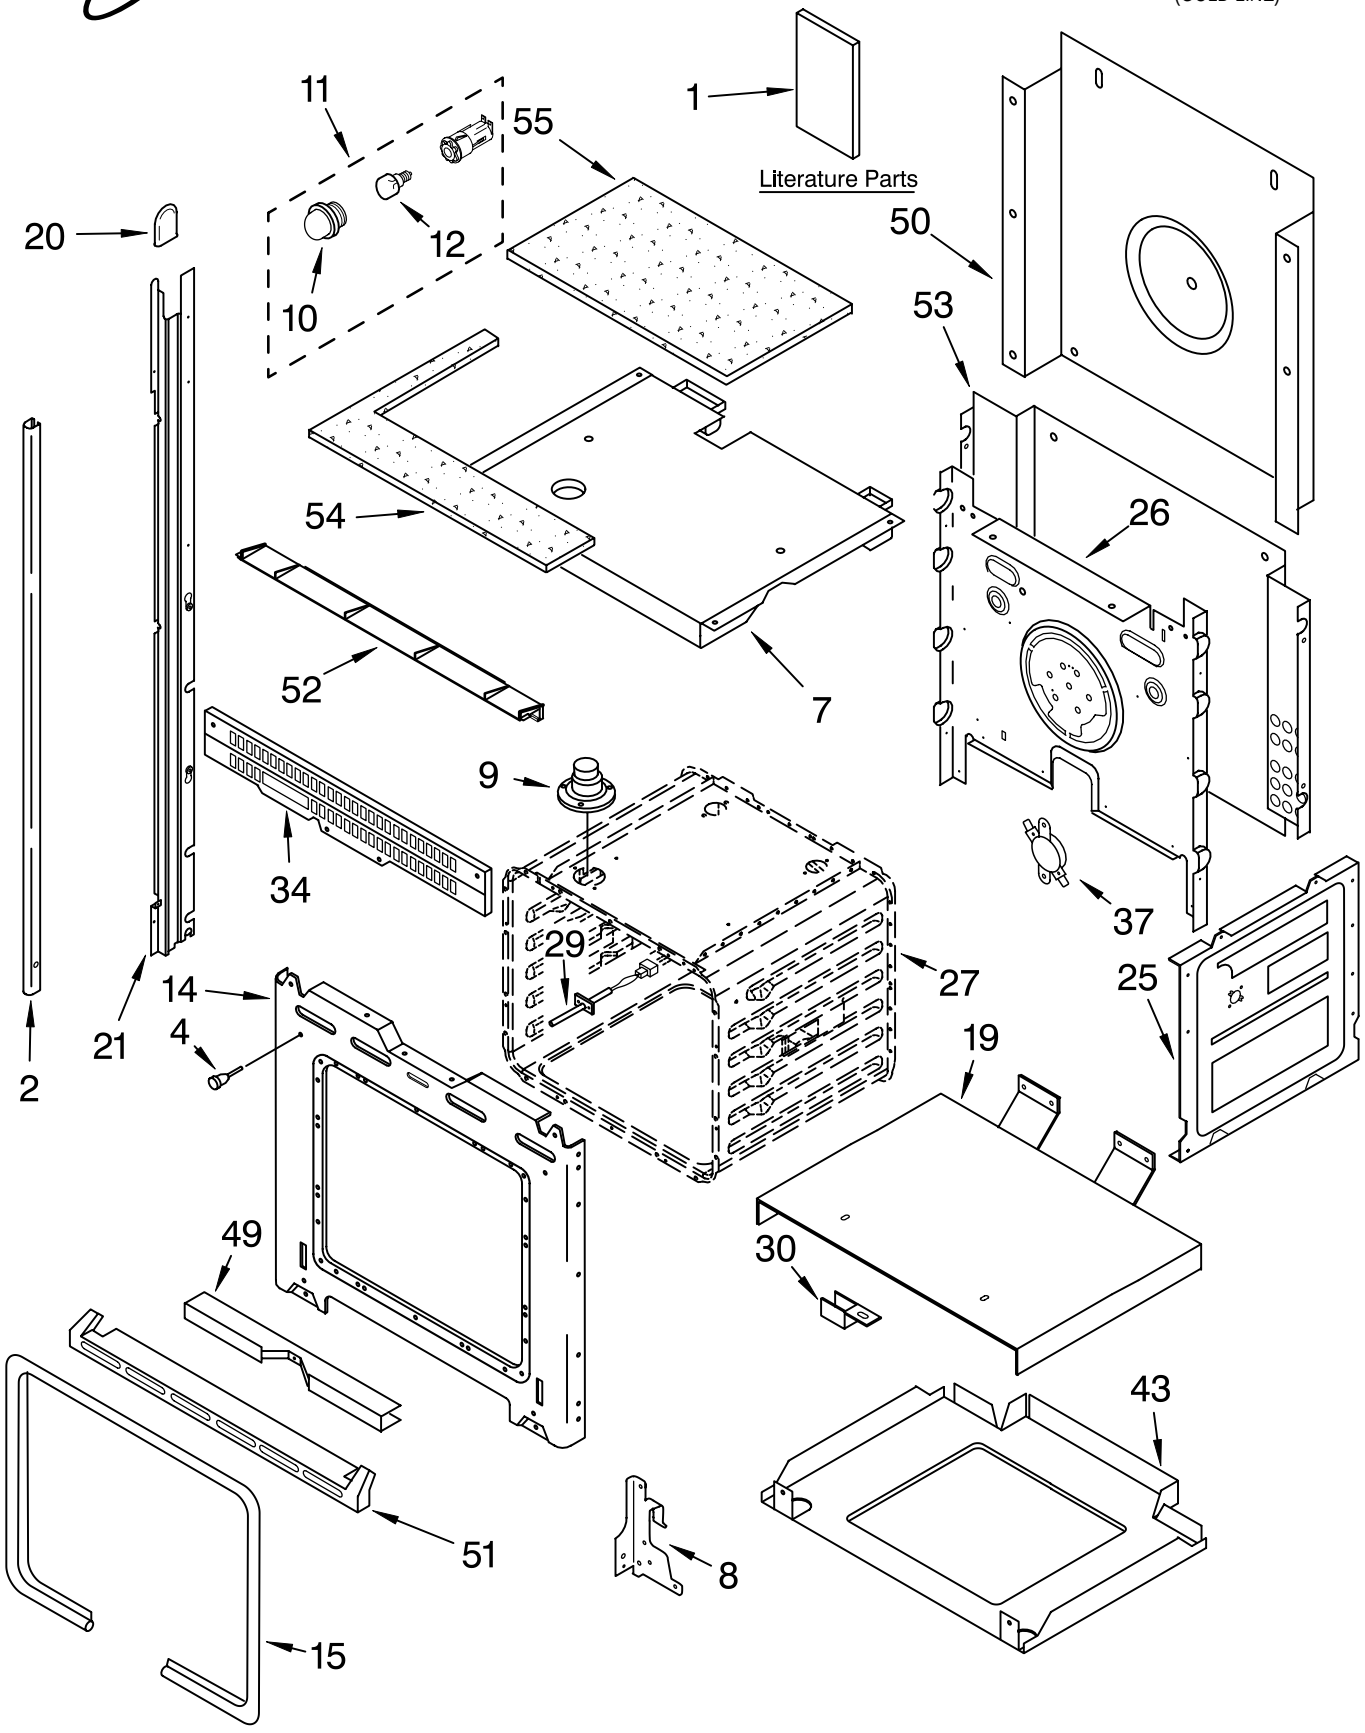**FOLLOWING PARTS NOT ILLUSTRATED**

**INSULATION**

| | |
|---|---|
| 4449315 | Insulation, Wrap |
| 4450364 | Insulation, Back |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**




| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | | Panel, Control |
| | 4452602 | Black |
| | 4452603 | White |
| | 4452973 | Biscuit |
| 2 | | Switch, Membrane |
| | 8300549 | Black |
| | 8300547 | White |
| | 4456432 | Biscuit |
| | 3400832 | Screw |
| 3 | 4452248 | Insulator, Board |
| 4 | 4452249 | Insulator, Board Support |
| 5 | 4452260 | Spacer, Foam |
| 6 | 4452345 | Insulator, Dialectric |
| 7 | 8300245 | Microcomputer |
| | 3400406 | Screw |

# OVEN DOOR PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

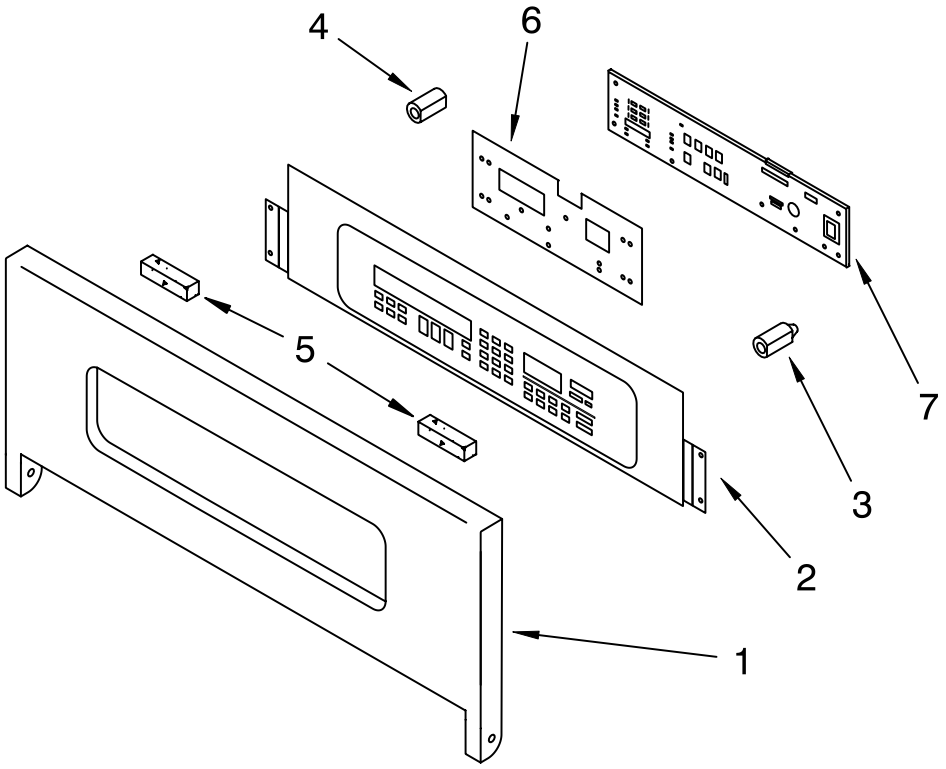


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| | | NOTE: The screws and nuts required to attach a part are listed immediately following that part. |
| 1 | 4455617 | Door Liner |
| 2 | | Hinge, Door |
| | 8300569 | Right Hand |
| | 8300570 | Left Hand (Black, White & Biscuit Models) |
| | 8300571 | Right Hand |
| | 8300572 | Left Hand (Stainless Steel Model) |
| | 4449743 | Screw |
| 3 | 4449253 | Glass, Inner |
| 4 | 4451721 | Insulation, Door |
| 5 | 8300777 | Retainer, Glass |
| | 4449809 | Screw |
| 7 | 4455256 | Glass, Inner |
| | 4449809 | Screw |
| 10 | 4449257 | Glass, Inner |
| 13 | | Door Handle |
| | 4448405 | Black Model |
| | 4448406 | White Model |
| | 8300255 | Biscuit |
| 14 | 4450813 | Bracket,Handle |
| | 3400832 | Screw |
| 18 | | Assy.,Door Glass |
| | 4452062 | Black Model |
| | 4452063 | White Model |
| | 8300257 | Biscuit |
| | 4452478 | Black Stainless Model |
| 19 | 4450361 | Shield, Heat |
| | 4449809 | Screw |
| 20 | 4451668 | Retainer, Glass |
| | 4449809 | Screw |
| 21 | 8300819 | Seal, Door Top |
| 23 | | Retainer, Clip |
| | 4450863 | Black Model |
| | 4450864 | White Model |
| | 3400832 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# LATCH PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

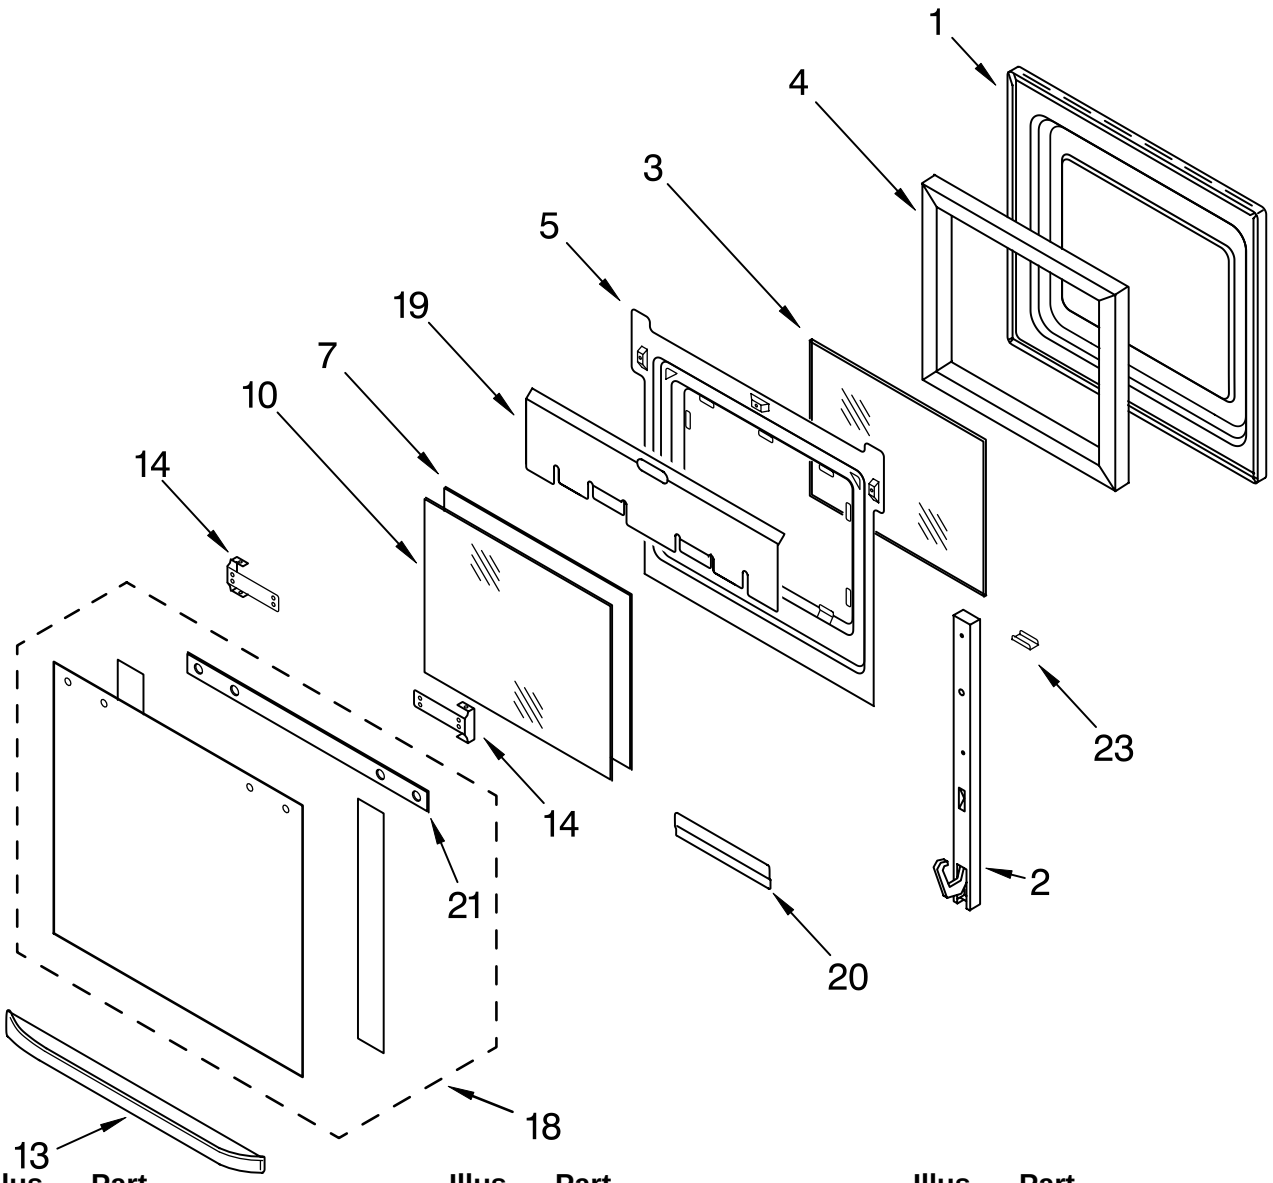


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

| | | |
|---|---|---|
| 1 | 4451759 | Vent, Exhaust |
| | 4449040 | Screw |
| 2 | 4455178 | Elbow Vent−Top |
| 3 | 4455177 | Elbow Vent−Bottom |
| 9 | 4450407 | Baffle, Rear |
| | 4449809 | Screw |
| 10 | 4451424 | Latch Assy. |
| 11 | 4451663 | Solenoid |
| 12 | 4452312 | Micro Switch N.C. |
| 13 | 4451426 | Micro Switch |
| 14 | 4451537 | Spring, Leaf |
| | 4449154 | Screw |
| 16 | 6610168 | Blower |
| 21 | 4451758 | Seal, Foam |
| 22 | 4455191 | Plate, Blower |

**IMPORTANT**
**PRODUCT SAFETY INFORMATION**

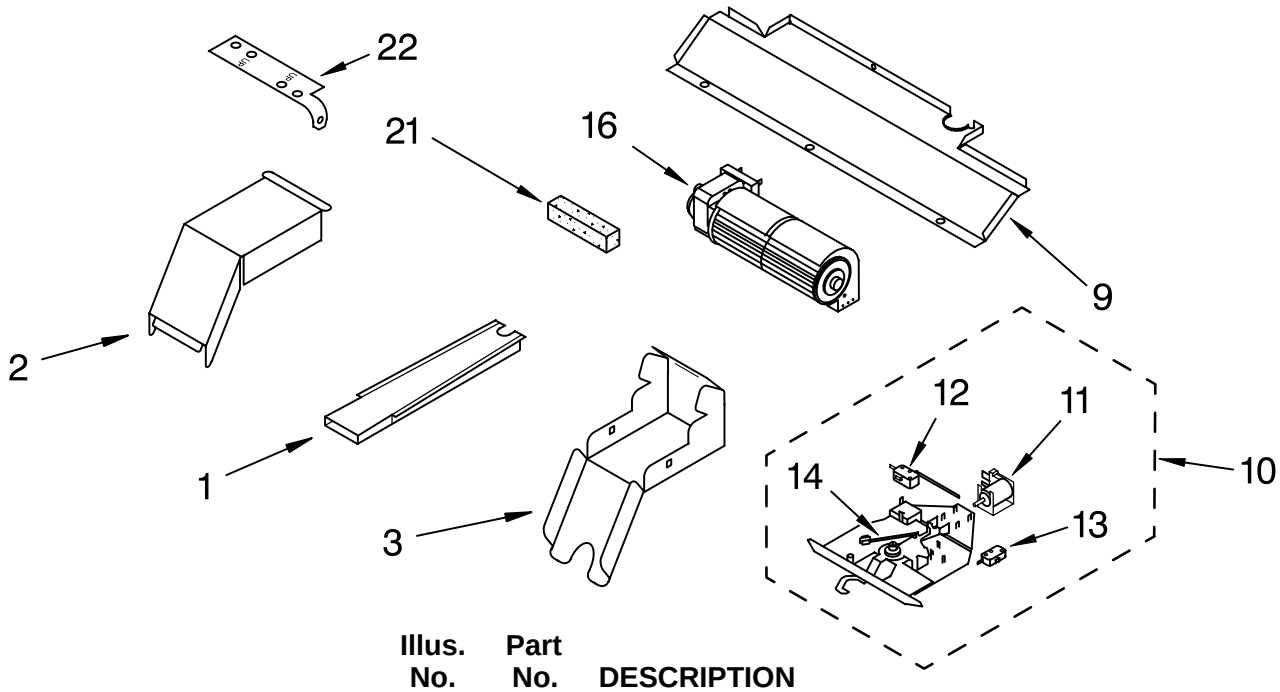**ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO – IT – YOURSELF REPAIRS OF MICROWAVE OVENS.**

The U.S. Consumer Product Saftey Commission warns against do – it – yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

**STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.**

**FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST**

# INTERNAL OVEN PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**




| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 2 | 4452154 | Element, Broil |
| | 4449154 | Screw |
| 3 | 3147563 | Grill, Broiler |
| 4 | 3147845 | Pan, Broiler |
| 6 | 4448715 | Rack, Oven |
| 7 | 4452153 | Element, Bake |
| 9 | 4451583 | Motor, Convection |
| 10 | 4452226 | Blade, Fan |
| 11 | 4452227 | Nut |
| 12 | 4448988 | Cover, Fan |
| 13 | 3181534 | Rack, Roasting |

# CABINET AND STIRRER PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

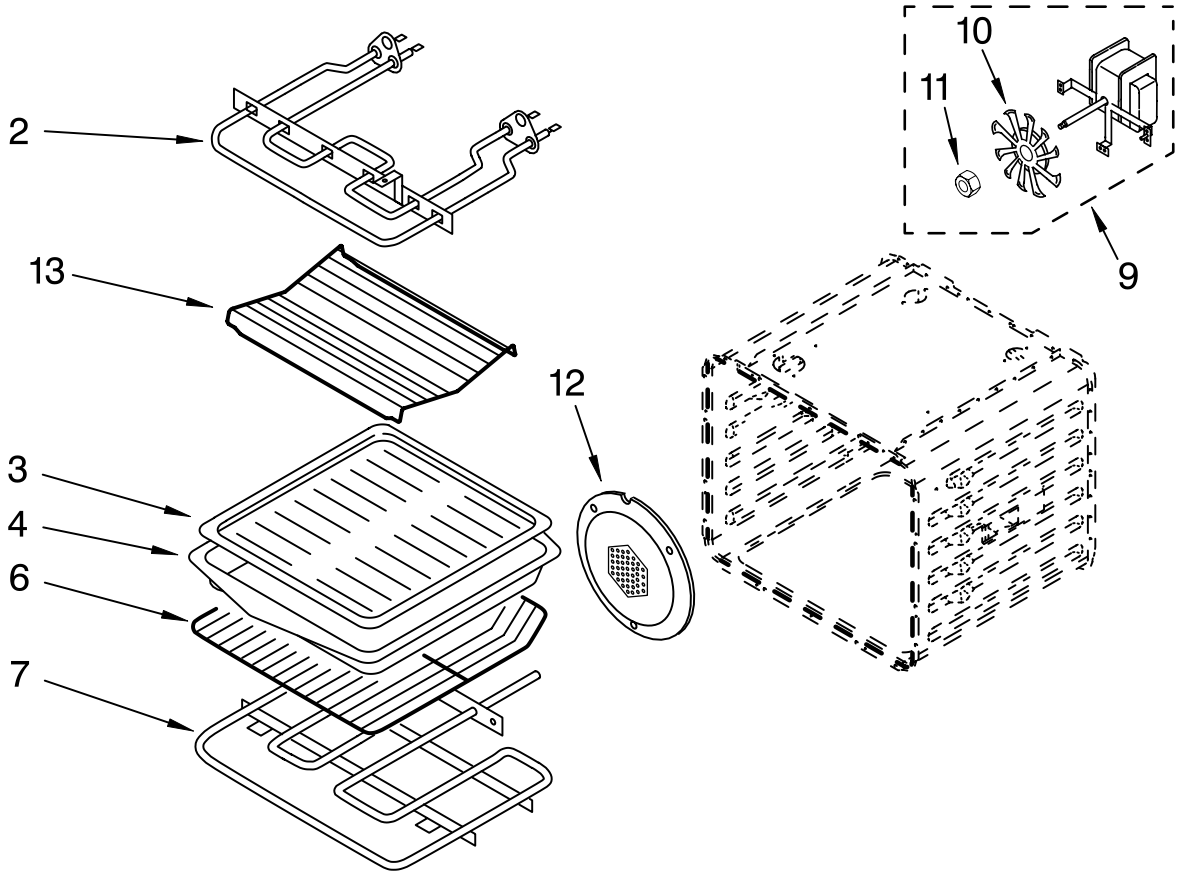


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET AND STIRRER PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 1 | 4375299 | Bracket, Capacitor |
| 3 | 4375037 | Rubber Ring |
| 4 | 4375038 | Screw |
| 5 | 4375314 | Air Duct, Magnetron |
| 11 | 4375315 | Damper |
| 12 | 4375260 | Duct, Inlet |
| 13 | 4375316 | Insulation, Switch |
| 14 | 4375322 | Fan Wheel |
| 15 | 4375317 | Duct, Air |
| 16 | 4375264 | Block, Slide |
| 17 | 4375248 | Cover Plate, Upper |
| 19 | 4375318 | Lens, Lamp |
| 20 | 4375319 | Spring |
| 21 | 4375320 | Reflector |
| 25 | 4375020 | Capacitor |
| 26 | 4375072 | Magnetron |
| 27 | 4375321 | Fuse |
| 28 | 4375231 | Block, Fuse |
| 29 | 4375278 | Motor, Blower |
| 30 | 4375279 | Thermostat |
| 31 | 4375079 | Thermostat |
| 34 | 4375286 | Transformer |
| 35 | | Hinge, Door |
| | 4375323 | Left |
| | 4375324 | Right |
| 36 | 4451008 | Torsion Spring |
| 37 | | Bracket, Hinge |
| | 4375327 | Left |
| | 4375328 | Right |
| 38 | 4375329 | Inlet |
| 39 | 4375331 | Door Strap |
| 40 | 4375333 | Fan Cap |
| 41 | 4375334 | Fan Cap Bottom |
| 42 | | Holder, Switch |
| | 4375335 | Left |
| | 4375336 | Right |
| 43 | 4375337 | Isolation Plate |
| 44 | 4375338 | Cover Plate |
| 45 | 4375339 | Plate, Door |
| 46 | 4375340 | Inner Frame |
| 47 | | Side Plate |
| | 4375341 | Right |
| | 4375342 | Left |
| 48 | 4375343 | Turntable |
| 49 | 4375344 | Ring Assembly |
| 50 | 4375345 | Shaft |
| 51 | 4375346 | Switch |
| 52 | 4375347 | Motor, Turntable |
| 53 | 4375348 | Lamp |
| 54 | 4375349 | Rectifier |
| 55 | 4375350 | Cable |
| 56 | 4375351 | Holder, Lamp |
| 57 | 4452220 | Rack, Microwave Convection |
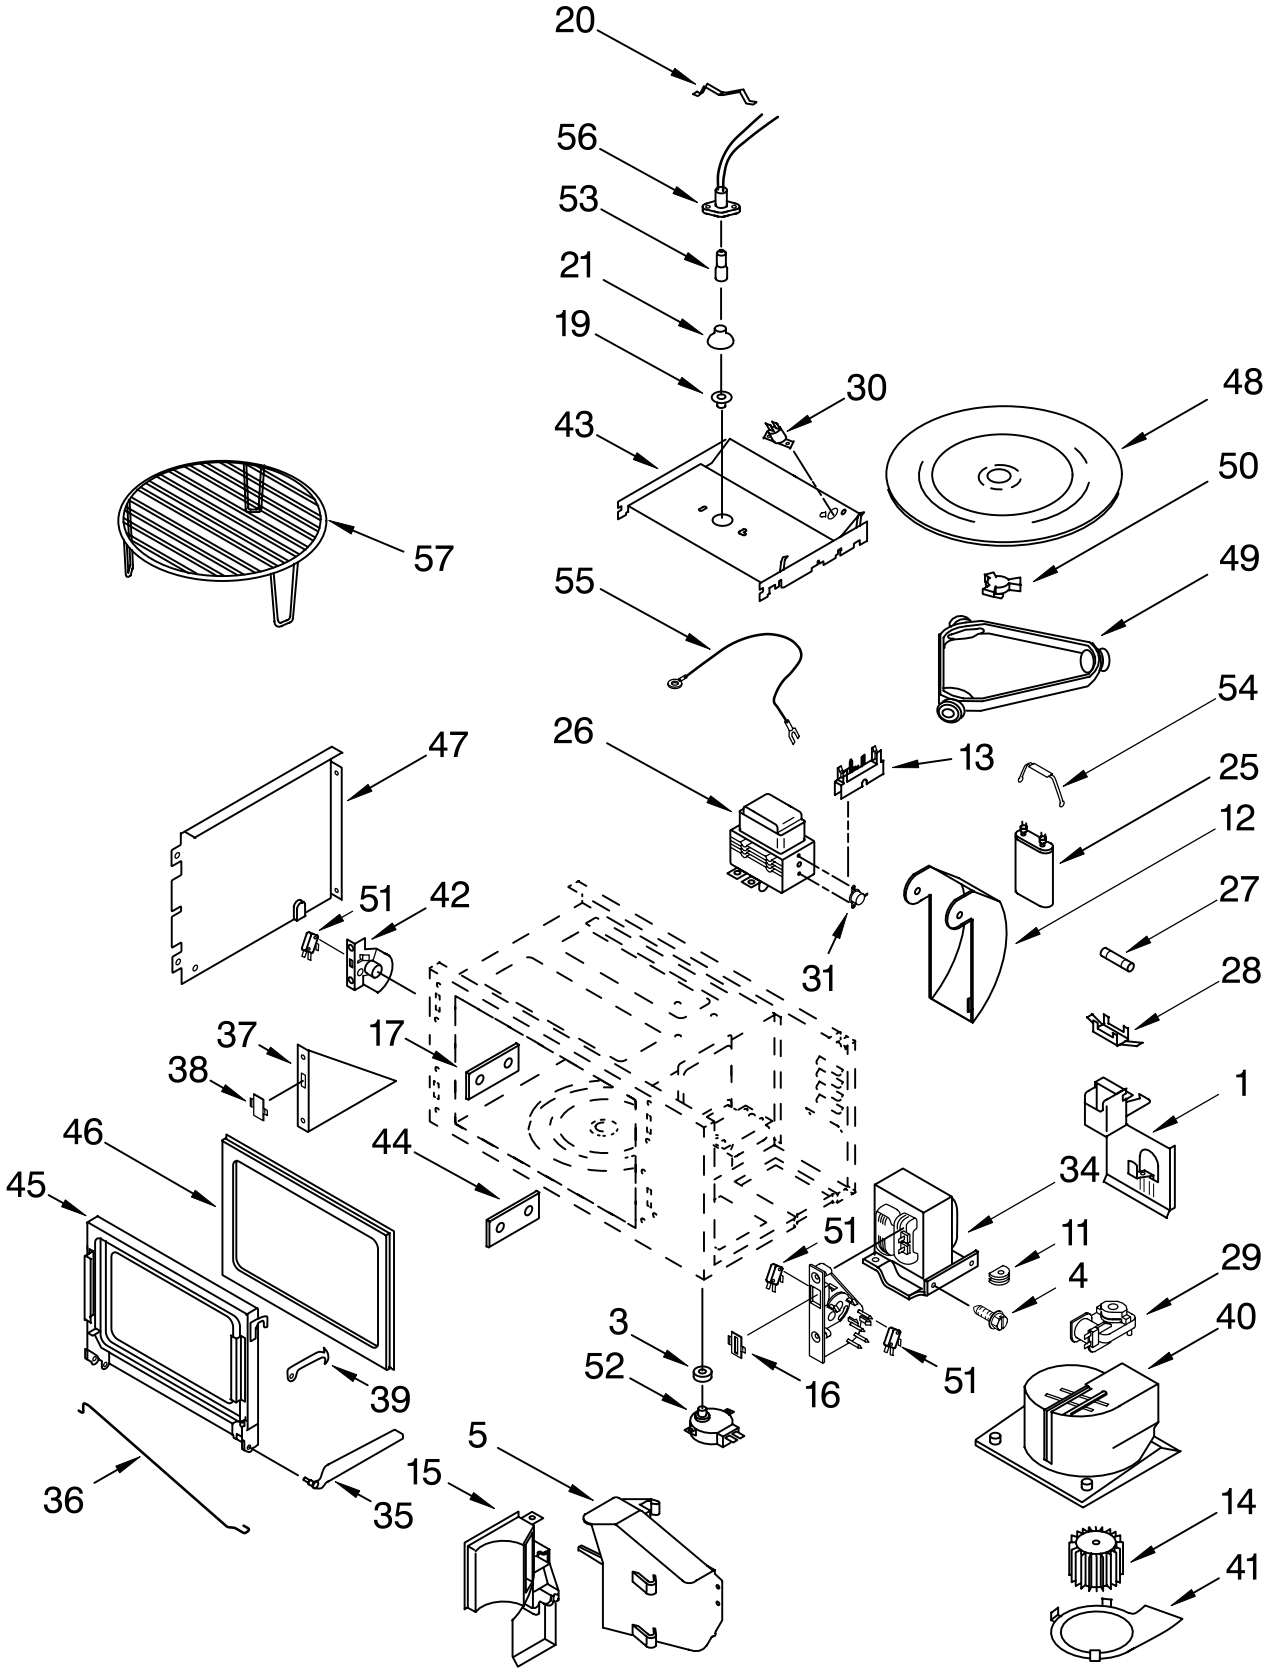
# MICROWAVE DOOR PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**




| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| | | NOTE: The screws and nuts required to attach a part are listed immediately following that part. |
| 9 | 4448937 | Glass, Middle |
| 10 | 4450945 | Frame, Door |
| 13 | 4450265 | Tape, Foam |
| 14 | | Bracket, Mounting |
| | 4449141 | Right Side |
| | 4449142 | Left Side |
| | 4449809 | Screw |
| 15 | 4449083 | Filler, Side |
| | 4449809 | Screw |
| 16 | | Handle, Door |
| | 4448405 | Black Model |
| | 4448406 | White Model |
| 17 | | Glass, Outer |
| | 4450379 | Black Model |
| | 4451219 | White Model |
| | 4452470 | Black Stainless |
| 24 | 4452330 | Bracket, Handle |
| | 4451040 | Screw |
| 25 | | Retainer, Glass−Clip |
| | 4450863 | Black Model |
| | 4450864 | White Model |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MICROWAVE COMPARTMENT PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

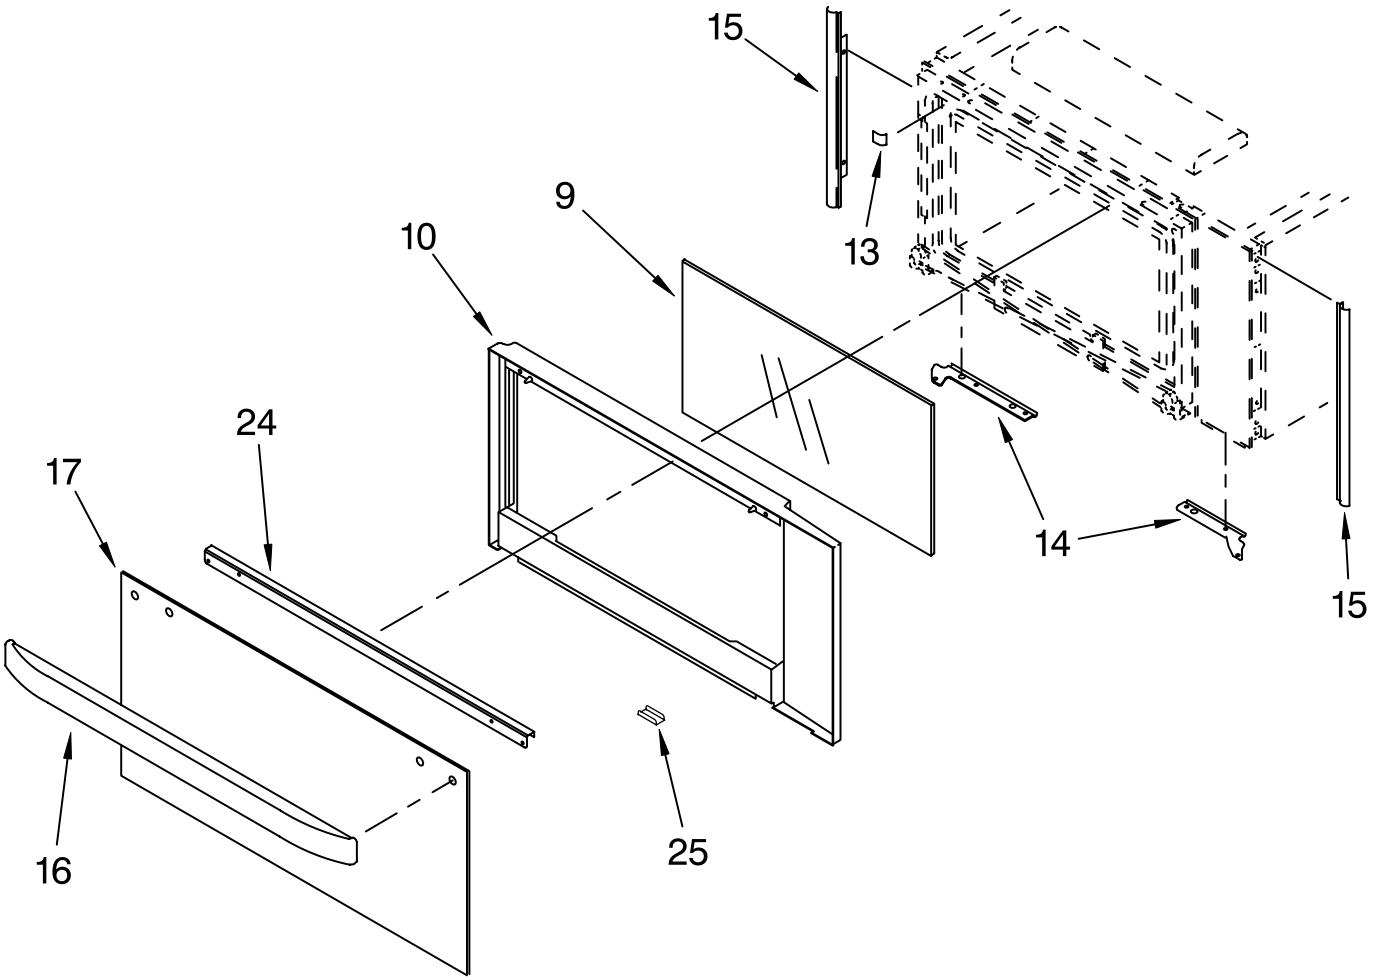


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| 5 | | Support Rails |
| | 4452551 | Right Side |
| | 4452552 | Left Side |
| | 4449809 | Screw |
| 11 | 4452547 | Rear Channel |
| | 4449809 | Screw |
| | 4449154 | Screw |

# TOP VENTING PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**

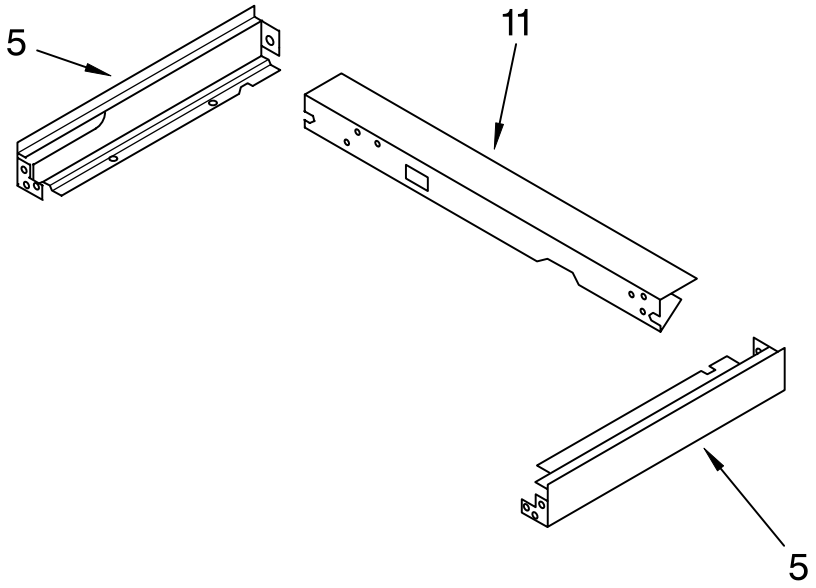


| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| | | NOTE: The screws and nuts required to attach a part are listed immediately following that part. |
| 1 | 4450377 | Cover, Top |
| | 4450118 | Nut |
| | 4449809 | Screw |
| 2 | 4448935 | Baffle, Blower |
| 3 | 4450920 | Blower |
| | 1180485 | Screw |
| 4 | 4450027 | Bracket, Duct |
| 5 | 6610122 | Transformer, (Lights) |
| | 4449809 | Screw |
| 6 | 4450366 | Exhaust Duct |
| 7 | 4451789 | Plate, Mounting |
| | 4449809 | Screw |
| 8 | 4449964 | Grommet |
| | 4449809 | Screw |
| | 112432 | Nut |
| 9 | 4454949 | Holder, Fuse |
| | 4449154 | Screw |
| 10 | 4454976 | Fuse |
| 11 | 4449868 | Block, Terminal |
| | 4449809 | Screw |
| 12 | 4452559 | Side, Combo |
| | 4449809 | Screw |
| | 4450038 | Screw |
| 14 | | Side, Control Top |
| | 4451597 | Right |
| | 4451598 | Left |
| | 4449809 | Screw |
| 15 | 4452244 | Back, Control |
| | 4449809 | Screw |
| 16 | 4450550 | Cover, Top Rear |
| | 4449809 | Screw |
| 17 | 4448664 | Clamp |
| | 4449809 | Screw |
| 18 | 4452366 | Cover, Top Front |
| | 4449809 | Screw |
| 19 | 4455038 | Transformer, Control |
| 20 | 4451934 | Suppressor |
| 21 | 4452247 | Plate, Cover |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

**For Models:GSC278PJB4, GSC278PJQ4, GSC278PJS4, GSC278PJT4**
**(Black) (White) (Black Stainless) (Biscuit)**
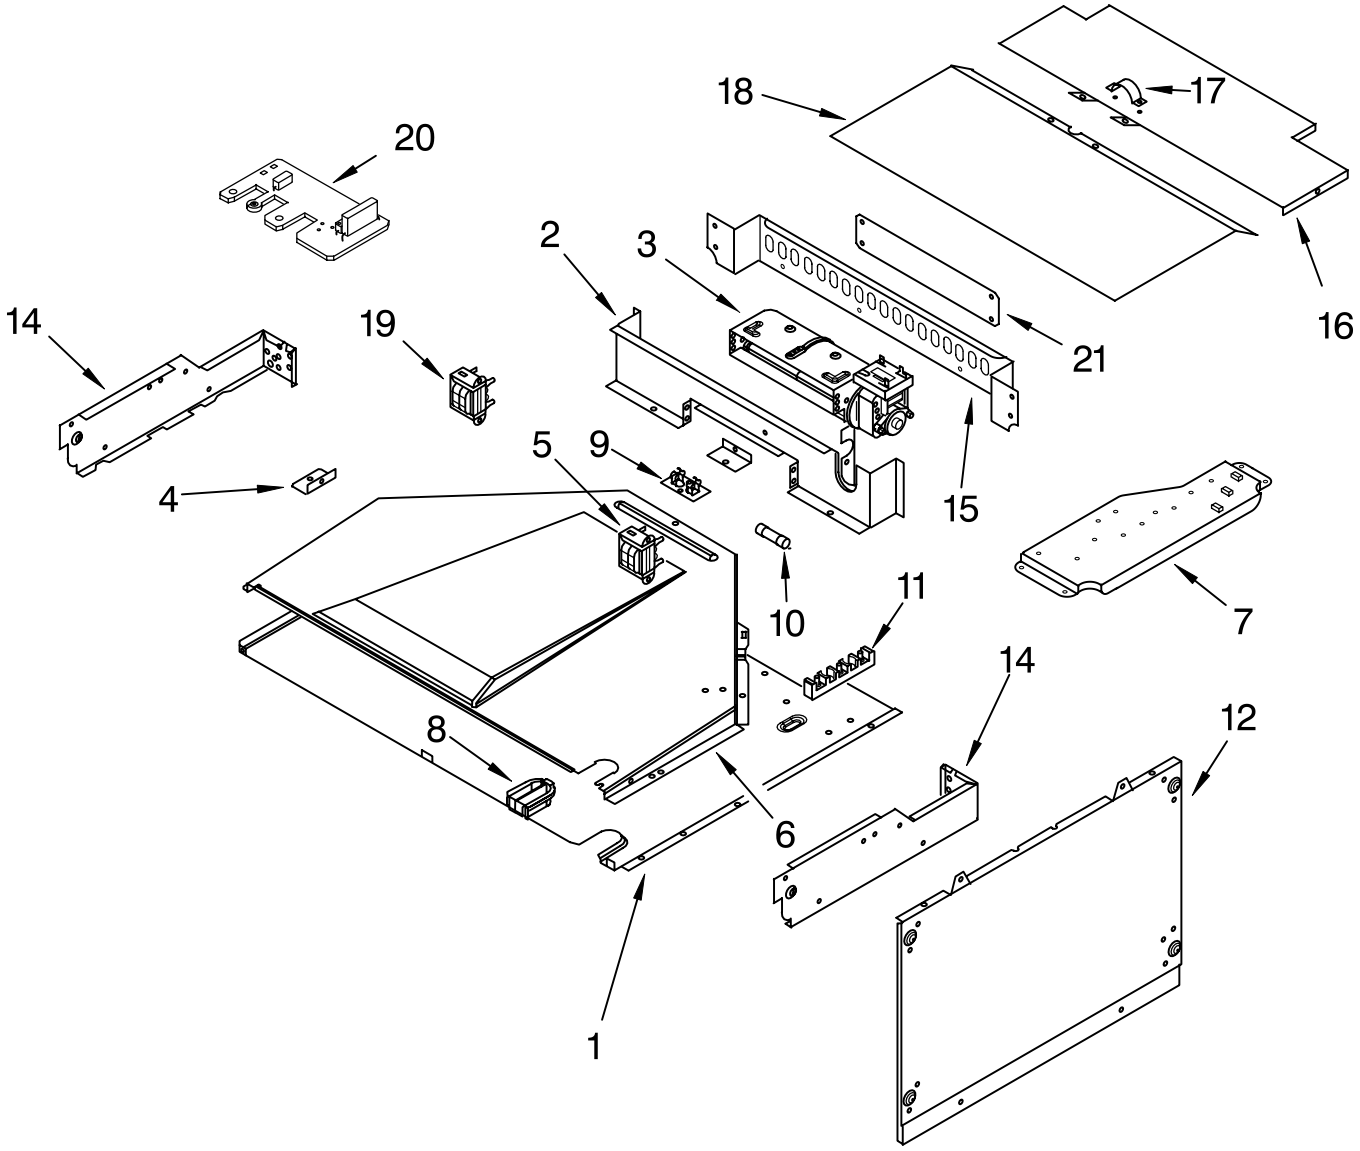
| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| | | **PAINT, TOUCH−UP (1/2oz.)** |
| | 72017 | White |
| | 261869 | Cord Brown |
| | 72032 | Black |
| | | **PAINT, SPRAY** |
| | 350930 | White |
| | 261900 | Citrine White |
| | 830864 | Black |
| | | **ADHESIVE** |
| | 591014 | Adhesive Loctite (1/3 oz.) |
| | 482338 | Sealer, Silastic (3 oz.) |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| | | **SPLICING WIRES−−25FT. LENGTH** |
| | 242828 | Wire (12 Ga. 150 c Black) |
| | 242820 | Wire (14 Ga. 150 c Black) |
| | 242821 | Wire (14 Ga. 150 c Blue) |
| | 242822 | Wire (14 Ga. 150 c Brown) |
| | 242830 | Wire (14 Ga. 200 c Brown) |
| | 242823 | Wire (14 Ga. 150 c Green) |
| | 242824 | Wire (14 Ga. 150 c Orange) |
| | 242829 | Wire (12 Ga. 150 c Red) |
| | 242825 | Wire (14 Ga. 150 c Red) |
| | 242831 | Wire (14 Ga. 200 c Red) |
| | 242826 | Wire (14 Ga. 150 c White) |
| | 242827 | Wire (14 Ga. 150 c Yellow) |
| | 242832 | Wire (14 Ga. 200 c Yellow) |

| Illus. No. | Part No. | DESCRIPTION |
|---|---|---|
| | | **FOLLOWING PARTS NOT ILLUSTRATED** |
| | 4378950 | Filler Kit (BL) |
| | 4378951 | Filler Kit (WH) |
| | 814381 | Kit, Hinge Pin |
| | 4448950 | Screw, Installation |
| | | **WIRING HARNESS PARTS** |
| | 4452239 | Harness, Latch |
| | 4455741 | Harness, Main |
| | 4450831 | Ground (M/W) |
| | 4450800 | Screw |
| | 4449809 | Screw |
| | 4450950 | Conduit, Combo |
| | 313438 | Clip, Harness |
| | 4452222 | Spacer, Harness |
| | 4454835 | Tie, Cable |
| | 4452400 | Lead, Ground |